

RS591K INSTRUCTIONS



TO BE INSTALLED BY A CERTIFIED MECHANIC ONLY | FOR RACE USE ONLY

BRAKE SIDE EXPLODED VIEW



INDEX

-  Lubricate
-  Thread Lock
-  Use Factory Piece

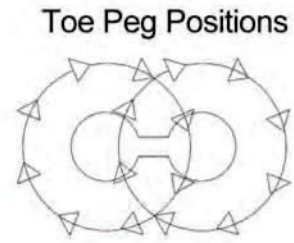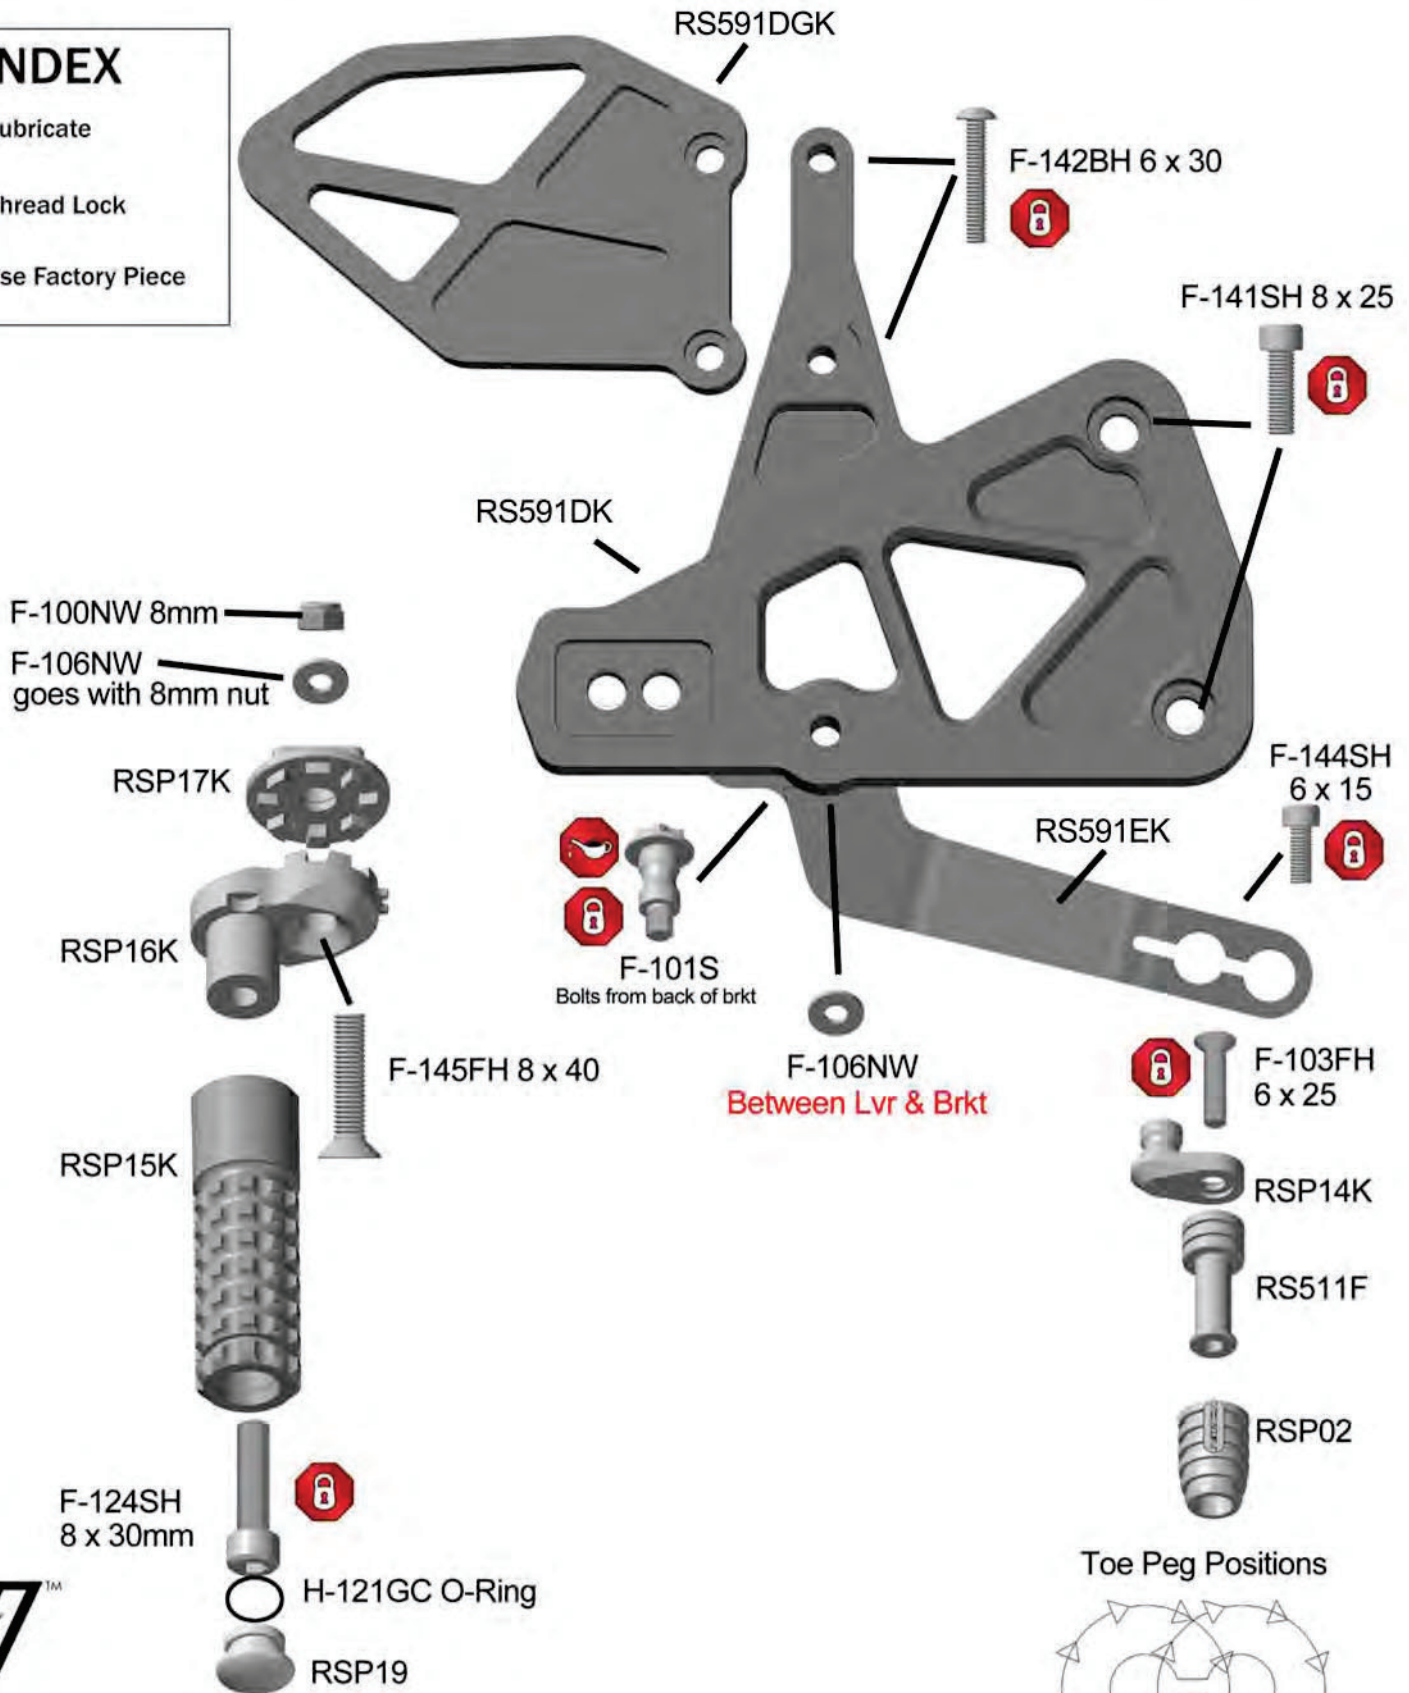

RS591K INSTRUCTIONS

TO BE INSTALLED BY A CERTIFIED MECHANIC ONLY | FOR RACE USE ONLY

SHIFT SIDE EXPLODED VIEW



INDEX

-  Lubricate
-  Thread Lock
-  Use Factory Piece

